

LLCONM8- SPECIFICATION SHEET




Q Series Remote

Q1/Q2/Q4/Q5

System Diagram

L-BUS

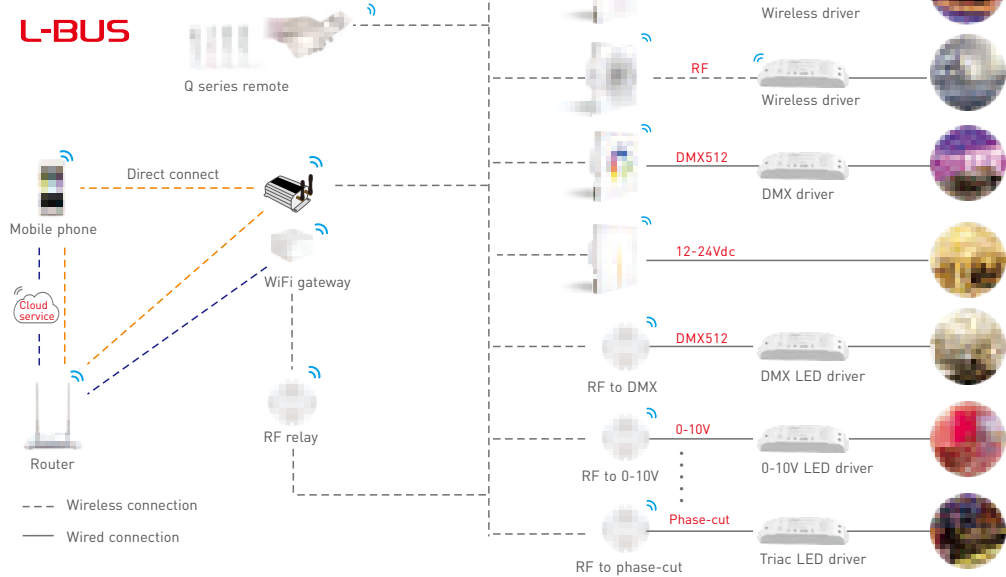


Product Introduction

Q series remote control is a 4 zones control in color circle dimming and slider touch dimming. Color and brightness is displayed by color indicators. Connect to any wireless driver within effective distance and keep the effect in sync. Working with F4-5A, F5-DMX-4A and touch panel, etc.

Parameters


Remote Type: 4 zones control Working Temp.: -20°C-55°C
 Power Supply: 2 AAA batteries Package: L166xW47xH22(mm)
 Wireless Type: RF 2.4GHz Weight(G.W.): 85g

Dimensions Unit: mm

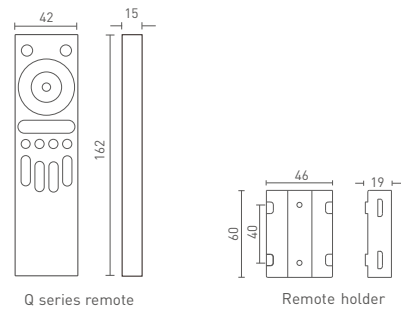


Key Functions


Q1

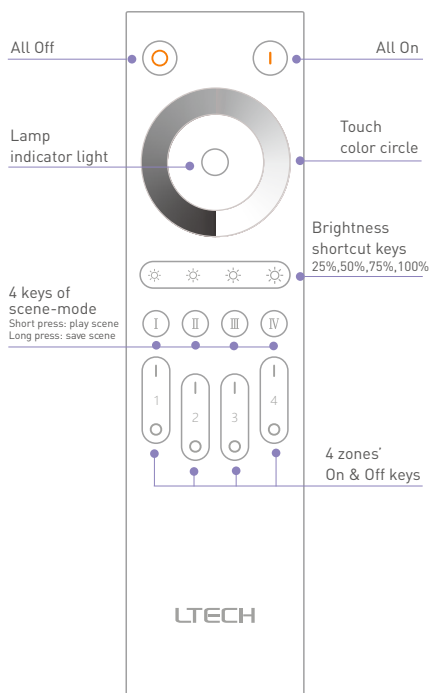

Q2

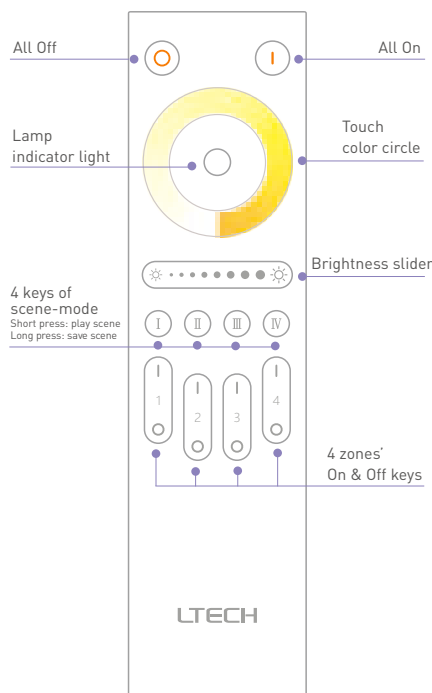


Q4

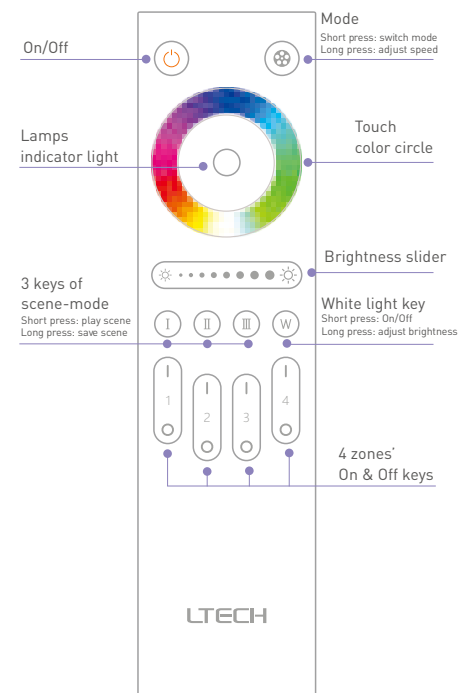


Mode

- 1. Static red
- 2. Static green
- 3. Static blue
- 4. Static yellow
- 5. Static purple
- 6. Static cyan
- 7. Static white
- 8. RGB jumping
- 9. 7 Colors jumping
- 10. RGB color smooth
- 11. 7 colors smooth
- 12. Static black (only turn off RGB)

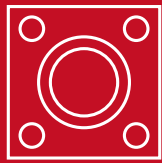

LLCONM8- SPECIFICATION SHEET

Q5

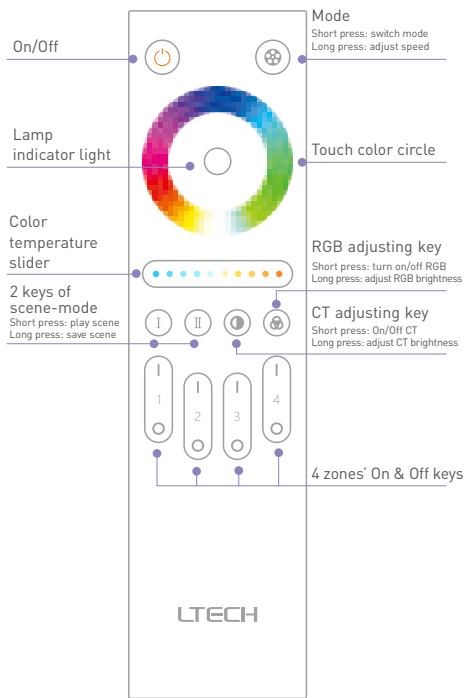

Mode

- | | | |
|----------------------|-----------------------|---------------------|
| 1. Red green jumping | 2. Green blue jumping | 3. Red blue jumping |
| 4. RGB jumping | 5. 7 Colors jumping | 6. Red green smooth |
| 7. Green blue smooth | 8. Red blue smooth | 9. RGB smooth |
| 10. 7 Colors smooth | | |

Match Code and Clear Code

Q series remote match with wireless driver:

- Q1/Q2/Q4 works with F series wireless driver and EBOX wireless module.
- Q5 works with F5-DMX-4A wireless driver.

Method 1:

1. Power off the wireless driver, and then hold down the matching zone's "ON" key on the remote.




2. Power on the wireless driver.



3. the lamps which connected with the wireless driver flicker several times and then stop flicking, the buzzer long beep, match successfully.

Method 2:

 1. Short press "ID learning button" on wireless driver: the lamps flicker, please complete step 2 within 15s.



2. Long press the matching zone's "ON" key on the remote, the lamps stop flicking, match successfully.



Q series remote match with touch panel:

- Q1 works with touch panel: E1/E1S/EX1/EX1S/EX5.
- Q2 works with touch panel: E2/EX2/EX6.
- Q4 works with touch panel: E3/E3S/E4/E4S/EX3/EX3S/EX4/EX4S/EX7/EX7S/EX8/EX8S.
- Q5 works with touch panel: E5S.

1. Long press on touch panel until indicator lights flicker.



2. Long press the matching zone's "ON" key on remote, the indicator lights of touch panel stop flicking, match successfully.




* Please match/clear code when indicator light of panel is white.

Match code between remotes:

Assuming that B match up with A.

1. Short press the top two keys of B remote simultaneously, the indicator light keeps on after release.
2. Then press any key on A remote within 5s. When the indicator light of B turns off, match successfully.

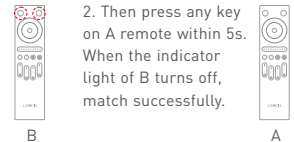

* Only the same model remote can match with each other.


Clear code

Press the top two keys on remote simultaneously for about 6 seconds, the indicator light flicker twice, deactivated the matching successfully.



Wiring Diagram

Remote works with wireless driver.

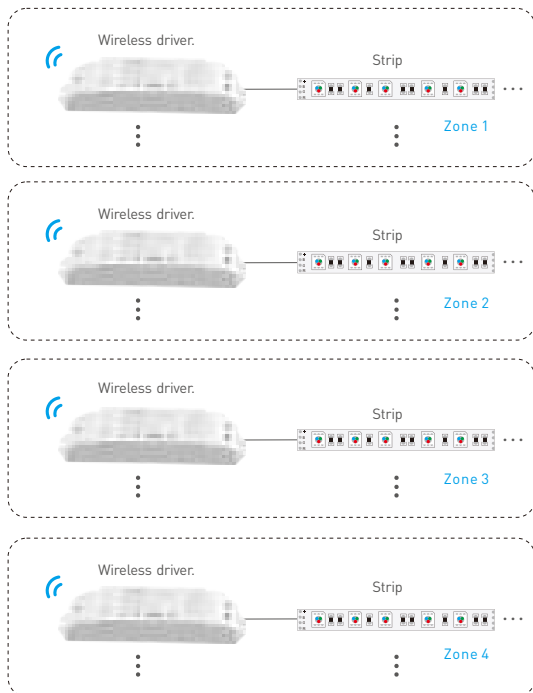

Remote works with touch panel.

